


RF Wireless Touching LED Remote Controller

(Brightness Adjusting)

Model No.: FUT021

1. Function of keys

 Key 1: ON Key 2: OFF Key 3: Highest brightness Key 4: Medium brightness Key 5: Lowest brightness



2. How to use

- 1. Use your finger to touch the color ring, you can change the brightness from the highest to the lowest (100%-1%).
- 2. Resume fuction. The previous settings will be resumed while power on again.
- 3. Link / Unlink

Link: Press "Key 3" one time within 3 seconds when power on, the link is done when the light blinks 3 times.

Unlink: Press "Key 3" five times quickly within 3 seconds when power on, the unlink is done when the light blinks 6 times.

3. Caution

Please don't touch or press the color ring while loading the battaries to protect the sensitiveness. Please use the remote controller 3 seconds after the battaries are loaded. Please reload the battaries when you find the color ring is not sensitive.



Made in China